COMPONENT MANUAL

Color-changing LED light

EasyPro CLED4SS Cabrio

For a Grove Kettles water-feature installation using the model identified above.

Match the equipment label

Match the fixture, control module, remote and transformer. The fixture may be submerged as permitted by the manufacturer; the control module and connections must remain out of the water. The original manual explains pairing, color modes and operation.

Manufacturer instructions included

The following pages are the original EasyPro manual currently linked from Grove Kettles. Safety warnings, diagrams, operating procedures and warranty language are retained without alteration.

Electrical work must follow the equipment instructions and applicable codes. Do not substitute a manual based only on a similar appearance or wattage.

Need help identifying your equipment?

Send Grove Kettles your order number and a clear photo of the model label. We can help locate the document for the equipment actually supplied.

Source: Grove Kettles Resources page, reviewed November 7, 2026. Manufacturer: EasyPro Pond Products.

CLED4SS

cabrio
lighting series
by EasyPro Pond Products



Cabrio Stainless Steel Color Changing LED Light

Instructions for Operation • Safety • Warranty

Thank you for purchasing EasyPro's Cabrio Stainless Steel Color Changing LED light. With this LED light you can illuminate a pond or waterfall, highlight a deck or patio and extend the enjoyment of your entire landscape in the evening hours. This light is fully submersible and may be used in or out of water (fresh water only).

Safety and Electrical Connections

1. WARNING Always disconnect the electrical supply before handling, maintaining, repairing or installing any pond equipment.
2. Light must be attached to a 12 volt AC UL listed transformer.
3. Never connect the lights directly to a 110 volt or higher outlet.
4. Connect the transformer to a 110 volt receptacle that is protected by a Ground Fault Circuit Interrupter.
5. Do not modify wiring in any way, Quick Connect ends must stay intact and should not be replaced with terminals. DO NOT modify the antenna on the control module. Do not submerge control module.
6. All electrical work must be performed by a qualified technician. Always follow the National Electrical Code (NEC) or the Canadian Electrical Code as well as all local, state and provincial codes. Failure to follow manufacturer's installation instructions may result in electrical shock, fire hazard, personal injury or death, damaged equipment, provide unsatisfactory performance and will void manufacturer's warranty.

Installation of LED Light

1. Before installing the product check for damaged or missing parts. Contact EasyPro immediately if pieces are missing or damaged.
2. Be sure the power is disconnected before installing the light.
3. Determine desired location to place the LED light.

   Note: Be sure to consider that individual diodes cannot be replaced at the end of their life. Permanent settings may not be the best option in the case that the entire LED fixture must be replaced.

Installation of LED Light (continued)

4. Use with or without removable base to fit fixture into desired location. If base is used it may need to be ballasted to prevent fixture from shifting.
5. Run wire from LED fixture back towards control module and power source.
6. Join the light to the control module by connecting the 4-prong Quick Connect, tighten the retention ring to ensure a secure connection. (Figure 1) Do not submerge connection or control module.

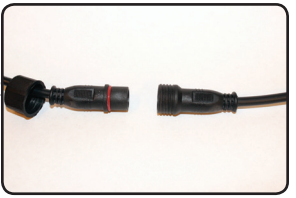


Figure 1

7. Join the control module to the transformer by connecting the 2-prong Quick Connect and tighten the retention ring. (Figure 2)

   Note: Power supply must be maintained to control module or light will default back to mode 1 on startup (transformers with automatic operation will reset the control module back to default on each start due to power interruption.)


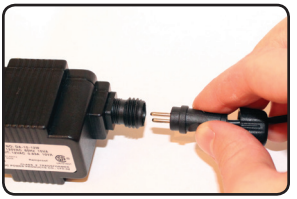


Figure 2

8. Plug the transformer into a GFCI outlet.
9. The LED light will default to mode 1 on initial startup. Use CLEDRC remote to sync multiple Cabrio fixtures together, change modes, brightness and speed.

Remote Control Operation (remote control sold separately)

- A single remote can operate multiple Cabrio fixtures in any combination within its range.
- Depress mode, brightness and speed buttons **slowly and deliberately** to ensure all light fixtures remain in sync on the same cycle.
- Desired setting must be achieved by clicking remote functions, holding a button down will not change settings.
- CLEDRC remote requires an A23 battery (included).

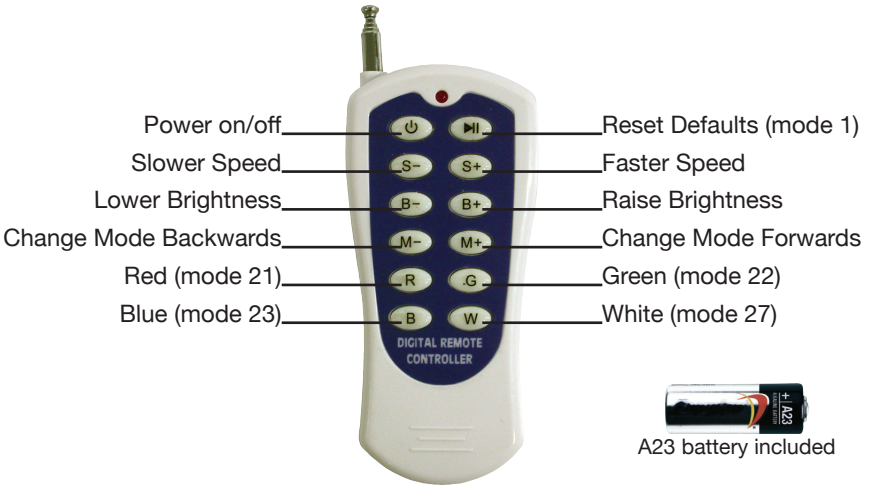

A23 battery included

Color Modes

1. (Default) Fade — Red, Green, Blue, Yellow, Purple, Lt. Blue, White — (fades into listed colors)
2. Change — Red, Green, Blue, Green
3. Change — Red, Green, Blue
4. Change — Blue, Green, Red
5. Change — Red, Green, Blue, Green — (four color cycle accelerates to strobe)
6. Change — Red, off, Green, off, Blue, off, Yellow, off, Purple, off, Light Blue, off, White, off
7. Change — Yellow, Pink/Purple, Light Blue
8. Change — Red, Yellow, White, off
9. Change — White, Yellow, Red, off
10. Change — Red, Green, Blue, Yellow, Purple, Light Blue, White
11. Solid — Pink
12. Solid — Yellow
13. Solid — Green/Yellow
14. Solid — Aqua
15. Solid — Sky Blue
16. Solid — Electric Blue
17. Solid — Blue/Purple
18. Solid — Purple
19. Solid — Hot Pink
20. Demo Mode — (Scrolls through modes 1-10, beginning with mode 10, 1, 2, 3...)
21. Solid — Red
22. Solid — Green
23. Solid — Blue
24. Solid — Yellow/Green
25. Solid — Purple/Pink
26. Solid — Light Blue
27. Solid — White

Brightness Settings (works on solid color modes only)



Speed Settings



Notes

- Changing the brightness or speed of a light cycle will reset the mode to the beginning of its cycle.
- To operate multiple Cabrio fixtures use an EasyPro 12 volt AC transformer. Be sure not to exceed the total transformer wattage with any combination.
    - CLED4SS - 3 Watts

Service and Maintenance

1. Disconnect the transformer from the power supply before service.
2. WARNING All parts of the lighting system should be checked on a regular basis to make sure the system is functioning properly.
3. All wires should be protected from possible damage from wildlife and other causes. Damaged wires due to neglect are not covered under warranty.
4. If light output is diminished check the face of the light fixture for debris and clean if necessary, or use remote control to increase brightness.

EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **five years** from the date of purchase. Removal of Quick Connect ends will void warranty. For use in fresh water only. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.

EasyPro™ pond products

800-448-3873 • Grant, Michigan
www.easypro.com